

Refill Instructions

Epson T557

Note: This cartridge requires Specialty Color Inks which are sold separately.

Note: User discretion is advised. Please follow instructions closely so as to not damage the mylar bags on the interior of the cartridge.


1. Gentle peel back the back edge of the label to expose the engagement tabs as shown below at right.



2. Using small flathead screwdriver, gently pry open the 5 locking tabs on the front of the cartridge as shown at right. Start on one side and work across towards the other, see image below right for location of tabs.


3. Once the front of the cartridge is loose lift the front up and the top should come right off.

4. Carefully lift out the color (see below for color codes) to be refilled and set on a paper towel.

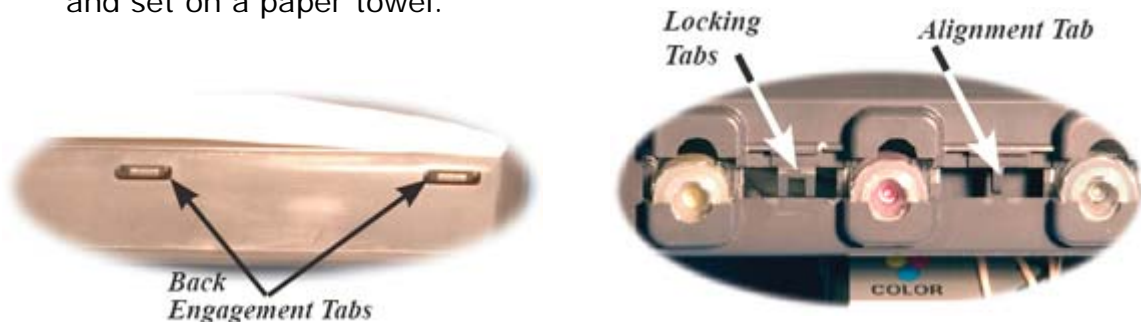

Inkjet Refilling Instruction

5. Attach needle to syringe and fill with appropriate ink. (see below for

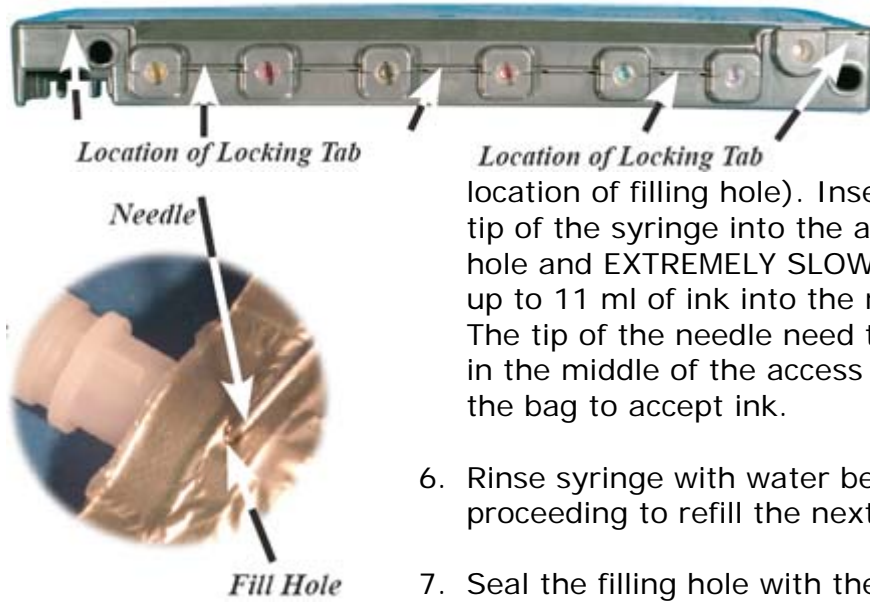

location of filling hole). Insert just the tip of the syringe into the access fill hole and EXTREMELY SLOWLY inject up to 11 ml of ink into the mylar bag. The tip of the needle need to be placed in the middle of the access fill hole for the bag to accept ink.

6. Rinse syringe with water before proceeding to refill the next cartridge.
7. Seal the filling hole with the included tape dot and proceed to the next

color.

Note: Immediately refill any empty cartridges.



*Special
Resetter
Required*